


# D-M-E JIFFY-MATIC

## Seal Removal Tool Kit (Cat. No. JSTK-235)

---

### Seal Removal:

1. Attach appropriate size tool to threaded end of tool handle. Use of protective gloves is recommended due to sharp edge of tool.
2. Insert tool into socket and turn handle 1/2 to 3/4 of a turn.

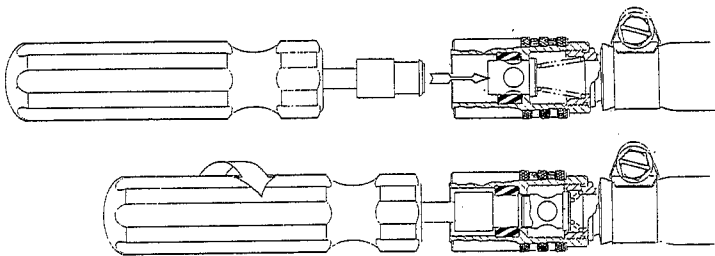

3. Remove tool and seal from socket. (If seal is not completely captured by tool it may remain partially lodged in socket. Seal pick provided can be used to remove seal if this occurs.)

### Inserting New Seal:

1. Place seal squarely into socket, flush with socket end.
2. Use any mating Jiffy-Tite plug to push seal into position.